



PAPER SHREDDER USER'S MANUAL

MODEL:S220LPS3-1

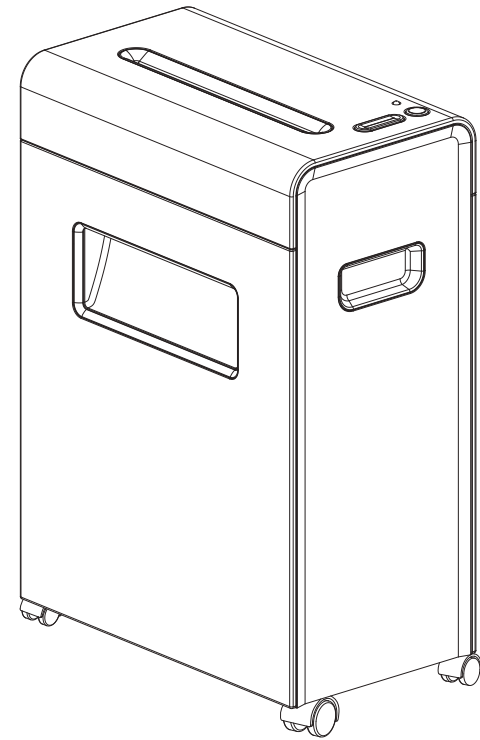

deli DELI GROUP CO.,LTD.
www.deliworld.com

Product Outlook & Names

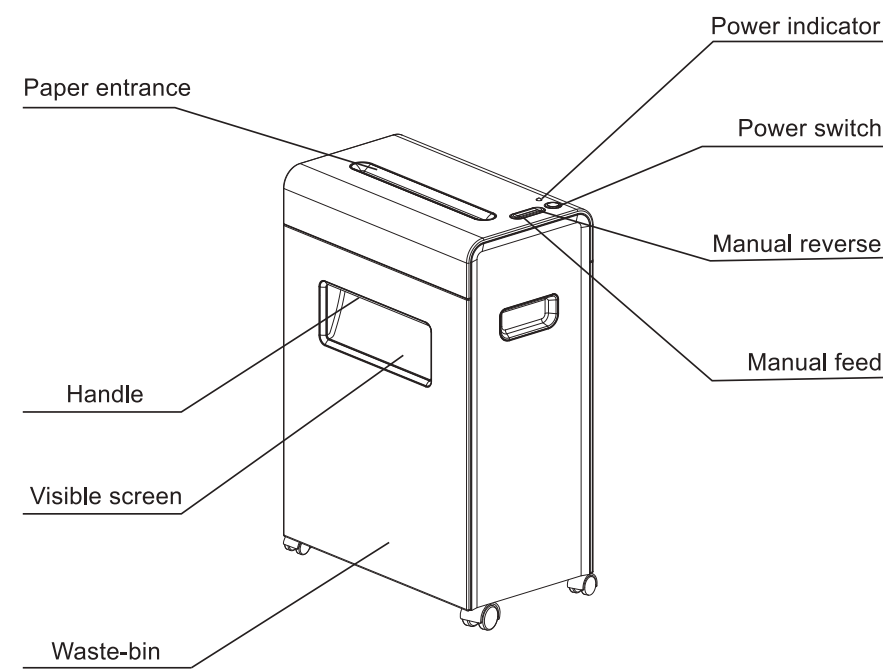

Operating Procedures

1. Connect the power cable & plug.
2. Press the press-button of the power switch, the indicator light will turn green, which means the machine is in standby mode. Then insert paper into the paper entrance vertically and the machine will start to shred automatically and resume standby mode afterwards.
3. When you want to stop the operation of shredding paper, you can press "REV" button for sending out them.
4. In case of overload such as machine jammed by paper, please press "reverse" button to take paper out. Reduce the paper sheets properly, then feed it again. If the paper is too short to take out, you can push "forward" button brokenly to shred it.
5. When the inside temperature is too high after continuous working, there is an overheat protection for the motor to shut off automatically at this time. Let the shredder cool down for 30 minutes before operating again. The shredder is intended for normal temperature and is used continuously for 5 minutes.

Trouble Analysis & Troubleshooting

| TROUBLE | TROUBLE ANALYSIS | TROUBLESHOOTING |
|---------------------|--|--|
| SHREDDER NO RUNNING | plug disconnect, no power | connect the plug |
| | lower voltage | provide the rated power |
| | if not put the waste-bin into the scheduled position, no power | push the waste-bin into scheduled position |
| | automatically stop running to prevent motor from over heating | wait for motor cooling down naturally |
| | paper is too transparency | fold paper or add thicker paper |
| | waste-bin full | empty waste-bin |
| TURN IN BLOCKED | overload not relieve | reduce the number of paper and feed again |
| | jammed paper | select the " manual reverse" button to get the excessive paper out |
| CONSTANTLY RUNNING | particles at the paper feed opening | clean up |
| NOISE LOUD | floor is hollow or machine not located steadily | adjust location |

In case the above solutions are not able to remove any trouble of the shredder, please stop using it immediately, disconnect the power plug and switch off power supply. Contact the local service agency of our company for disassembly and service of the shredder.

CERTIFICATE

Inspector: _____

Date of Manufacture: _____

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nddeli.com www.deliworld.com



KEEP FOR FUTURE USE

Version: 1.3
Date: 07-2020

No.9921 Instruction Manual

Thank you for purchasing No.9921 cross cut paper shredder, the advanced functions and design of which mostly suit your office. We are confident that the shredder will make a major contribution to destroy used documents and ensure the confidentiality of sensitive materials.

To help you correctly use the shredder and prevent you and others from suffering hazards and property losses, please read this manual carefully.

Usage attention

Warning

- Please the shredder in a steady place and do not overturn it.
※ Otherwise there is the possibility of breaking the machine.
- Unauthorized disassembly, rebuilding or service of the shredder is not allowed.
※ Otherwise there is the possibility of electric shock or injury.
- Do not handle power plug by wet hands.
※ Otherwise there is the possibility of electric shock.
- Plug out the power plug from the socket of power supply when dumping paper scraps or moving the shredder, and also in case of long time unused.
※ Otherwise there is the possibility of fire or electric shock.
- Do not sprinkle water to the shredder.
※ Otherwise there is the possibility of fire or electric shock.
- Do not put the shredder beside any heating or cooling equipment or in a place where there is high temperature, excessive moist or lots of dust.
※ Otherwise there is the possibility of breaking the machine.
- Never damage or process the power cable. Never put heavy objects on the electric line.
※ Otherwise there is the possible of fire or electric shock.
- In case of abnormal conditions such as emission of smoke odor, please stop using the shredder.
※ Otherwise there is the possibility of fire or electric shock.

If the shredder and power cable have any breakage, please do not use it.
※ Otherwise there is the possibility of fire or electric shock.

Caution

Merujuk ke teks yang disertai di dalam dokumen.

Danger! Keep out of reach of children.
※ Blade inside machine. Protect yourself against injury.

Danger! Never touch the blade.
※ Blade inside machine. Protect yourself against injury.

Keep ties or sleeves away from paper-feeding opening to avoid pulling-in.
※ When accident happens, press "REV" button and then take it out.

Keep hair away from paper-feeding opening to avoid pulling-in.
※ When accident happens, press "REV" button and then take it out.

Keep clip, pins or staples away from paper-feeding opening to avoid pulling-in.
※ When accident happens, press "REV" button and then take it out.

Please keep the shredder away from flammable gas.
※ To Avoid a fire

To refer to text in an accompanying document.

Only suitable for use in indoors.

This appliance bears the WEEE mark (Waste of Electric and Electronic Equipment) signifying that, at the end of its life cycle, it should not be disposed of with household waste, but at a recycling centre. The recycling of waste contributes to the conservation of our environment.

Product Specifications

| | |
|-------------------------|---------------|
| Power | AC 230V/50Hz |
| Shred type | cross cut |
| Shred size | 3x16mm |
| Shred capacity(70g A4) | 6 sheets |
| Shred speed | 2.0m/min |
| Entrance width | 220mm |
| Waste-bin volume | 16L |
| Dimensions | 330x195x495mm |
| Noise | ≤ 70dB |
| Net weight | 7.7kg |
| Continuous working time | ≥ 5min |

Packing List

| No. | NAME | Q'TY | REMARK |
|-----|--------------------|------|--------|
| 1 | Shredder | 1 | |
| 2 | instruction manual | 1 | |
| 3 | guarantee card | 1 | |
| 4 | passed certificate | 1 | |

Maintenance

1. Pull out the power plug from the socket of power supply before maintenance
2. The maintenance by user is only limited to cleaning visible surface of the shredder.
3. When cleaning the surface of the shredder, do not allow water to drop into the interior of the shredder.
Use cloth dipped with small amount of soap water to clean the exterior of the shredder. The cloth must be closely wrapped around hands during cleaning, so as to avoid the cloth to drop into the paper entrance, and it is prohibited to use organic solvents such as gasoline, benzene solvents or dilution agent to do the cleaning. Decontamination powder must not be used too.

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
3. No free of charge repair service shall be provided in the event of any of the following circumstances:
 - (1) Expiration of the warranty period;
 - (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
 - (4) Failure or damage caused by force majeure;
 - (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: _____ Y _____ M _____ D

| | | | | | |
|----------------------|----------------------------|---------------------|--------------------|----------------------------------|------------------|
| Product Information | Product Name | Serial Number | | | |
| | Product Model Number | Manufacturing Date | | | |
| Customer Information | Company Name | | | Contact | |
| | Address | | | Phone | |
| Sales Information | Dealer Name | | | Contact | |
| | Address | | | Phone | |
| | Date of Purchase | | | Invoice No. | |
| Maintenance Record | Description of Malfunction | Maintenance Results | Customer Signature | Maintenance Technician Signature | Maintenance Date |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

This copy shall be cut along the dotted line and kept by the dealer.

| | | | | | |
|----------------------|----------------------------|---------------------|--------------------|----------------------------------|------------------|
| Product Information | Product Name | Serial Number | | | |
| | Product Model Number | Manufacturing Date | | | |
| Customer Information | Company Name | | | Contact | |
| | Address | | | Phone | |
| Sales Information | Dealer Name | | | Contact | |
| | Address | | | Phone | |
| | Date of Purchase | | | Invoice No. | |
| Maintenance Record | Description of Malfunction | Maintenance Results | Customer Signature | Maintenance Technician Signature | Maintenance Date |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |